

1-1. Key information

Keys

The following keys are provided with the vehicle.

► Vehicles with power back door system



► Vehicles without power back door system



- 1 Master keys
- 2 Valet key
- 3 Key number plate
- 4 Flat key

n When required to leave a key to the vehicle with a parking attendant

Lock the glove box as circumstances demand. (→ P. 267)

Carry the master key for your own use and leave the valet key only with the attendant.

n Key number plate

Keep the plate in a safe place such as your wallet, not in the vehicle. In the event that a key is lost, a new key can be made at your Lexus dealer using the key number plate. (→P. 414)

NOTICE

n To prevent key damage

- 1** Do not subject the keys to strong shocks, expose them to high temperatures by placing them in direct sunlight, or get them wet.
- 1** Do not expose the keys to electromagnetic materials or attach any material that blocks electromagnetic waves to the key surface.
- 1** Do not disassemble the key.